


STEP-DOWN SHOWER
WATER STOP AND COVER
ANGLE - SHEET
MEMBRANE

NOTES

For Waterproofing Membrane Support
Angle, apply ARDEX STB/STA TAPE
and weld WPM750 to STB/STA TAPE.

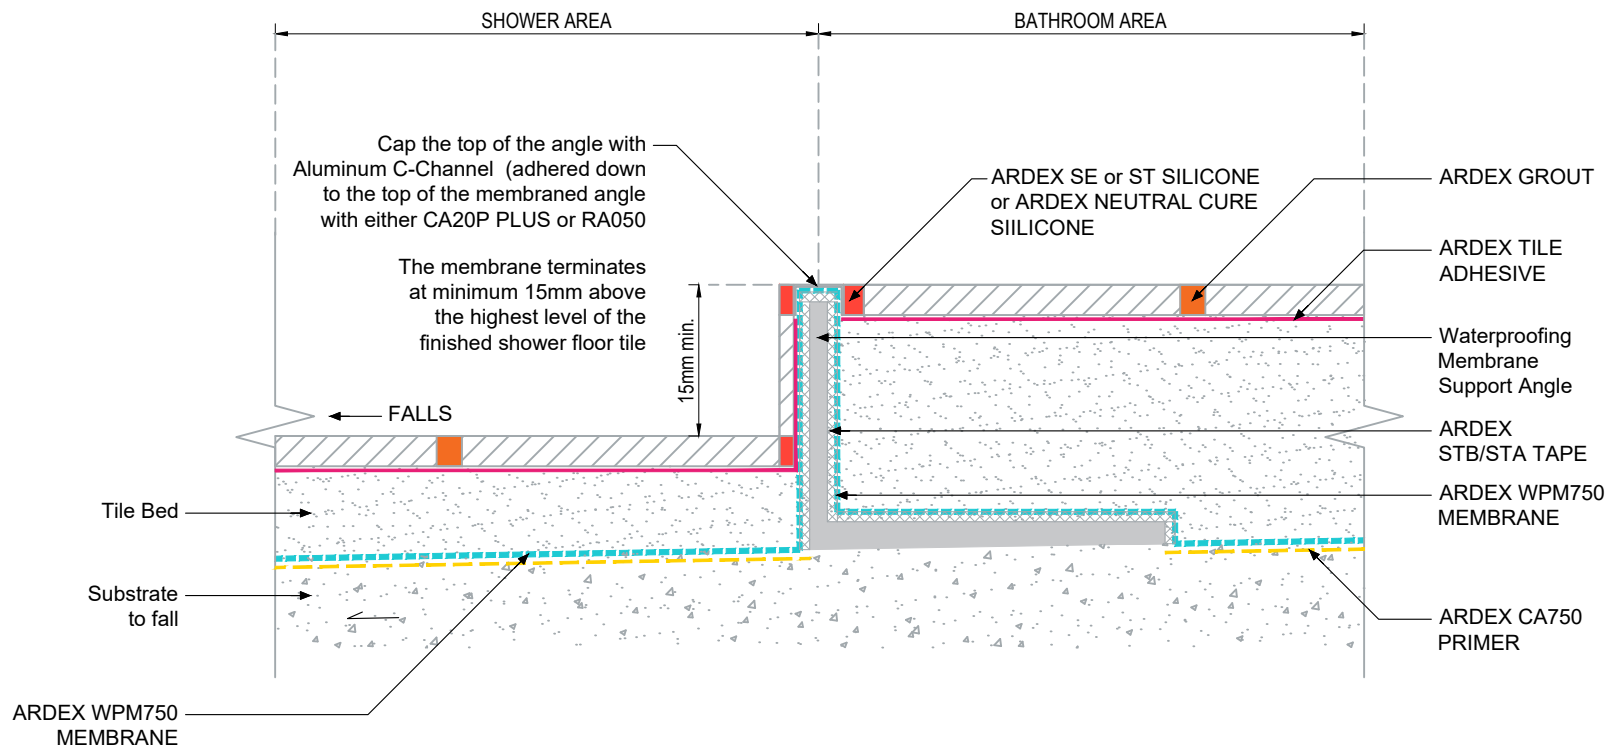

The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program. Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installation recommendations. The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request

FILE NAME	STEP-DOWN SHOWER WATER STOP AND COVER ANGLE - SHEET MEMBRANE
DRAWN	09/07/2026 by MM
CHECKED	ADAM MCGLONE
SIZE	A4



ARDEX AUSTRALIA
www.ardexaustralia.com

SCALE NTS
DRAWING D262